




# Drobo FS DRDS2-A Power Switch Replacement

Replacing the Power Switch on the Drobo FS DRDS2-A

Written By: Rye Cassan

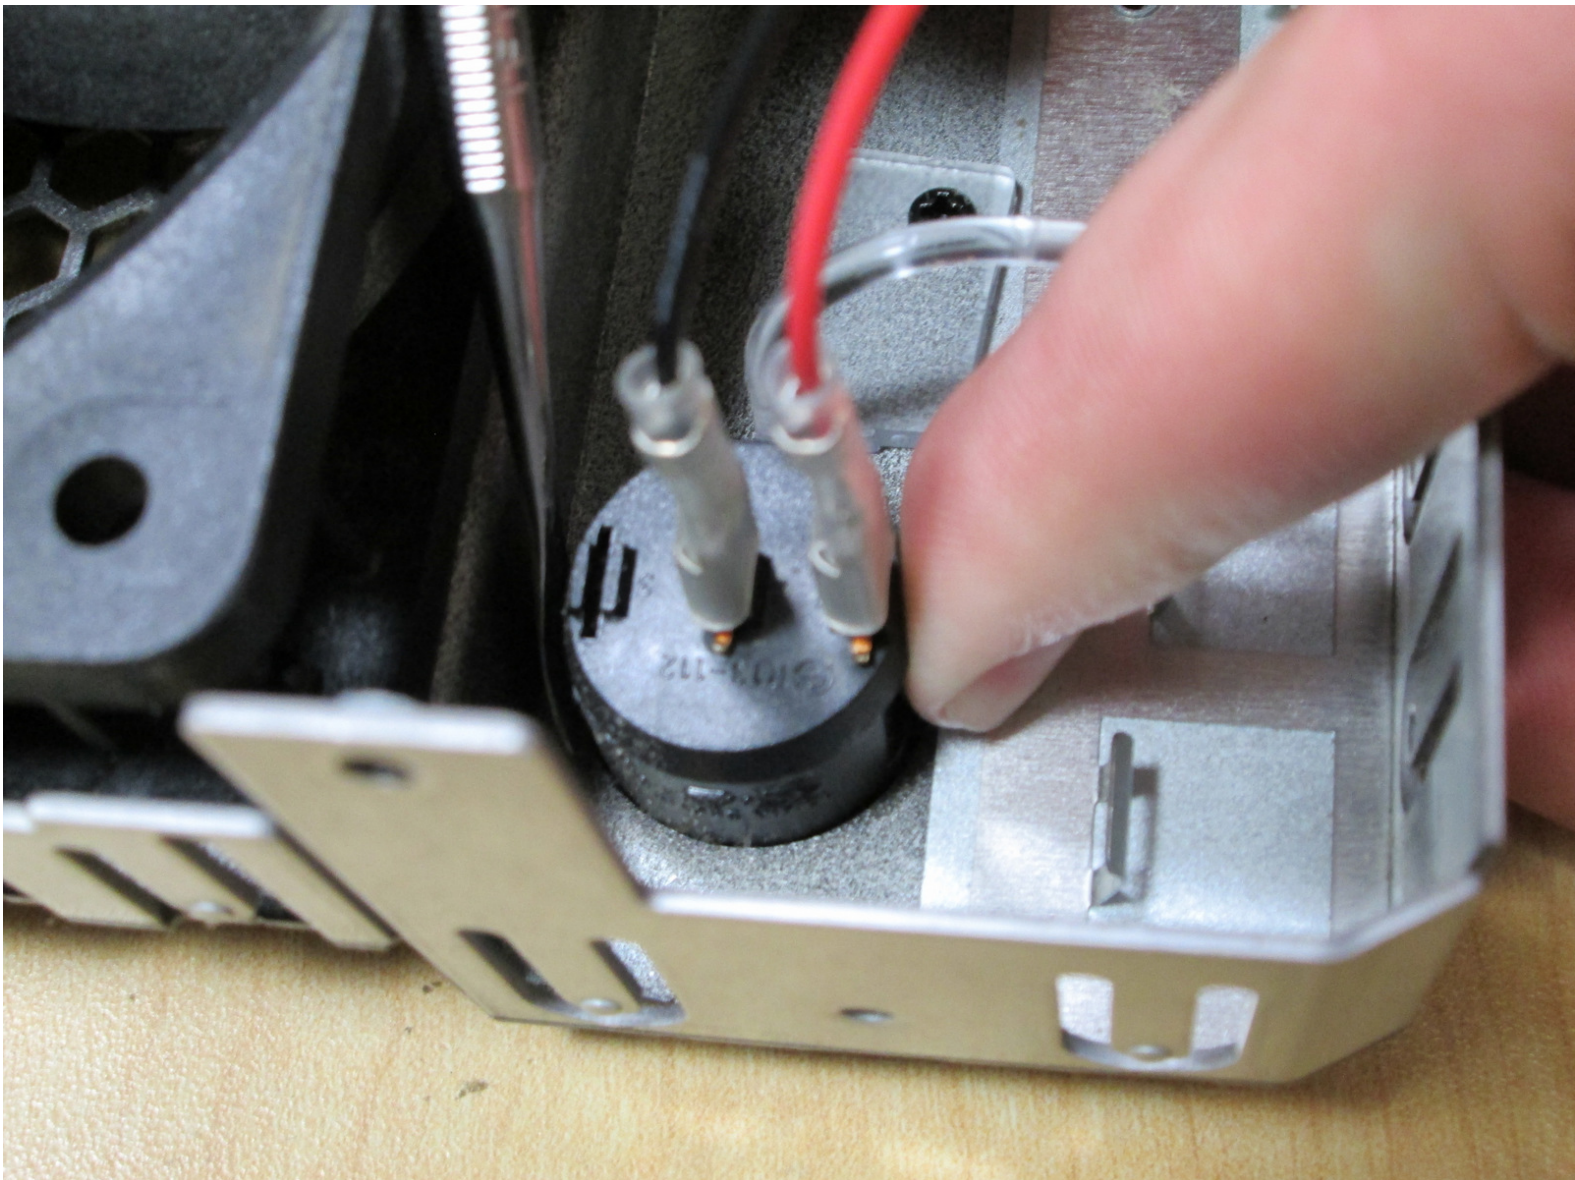

## INTRODUCTION

How to replace the Power Switch



### TOOLS:

- [Phillips Screwdriver](#) (1)
- [Spudger](#) (1)



### PARTS:

- [Replacement Power Switch](#) (1)

## Step 1 — Case



- To start getting the case off remove the front panel so it's out of the way.

## Step 2



- Next remove the screws from the feet of the case with a phillips head screwdriver.





## Step 3




- To remove the case, place the Drobo on its back and slide the case off.

## Step 4 — Power Switch

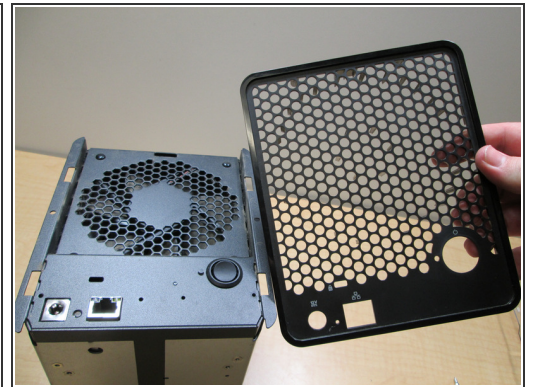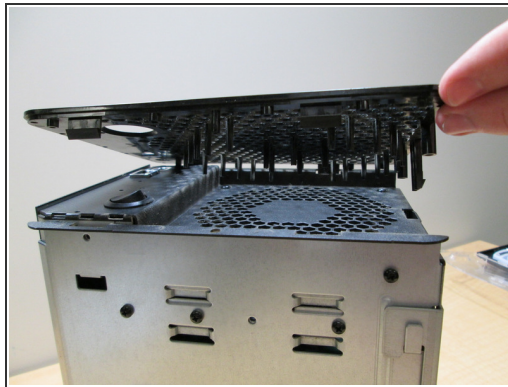



- Press tabs to release back cover and lift off

## Step 5

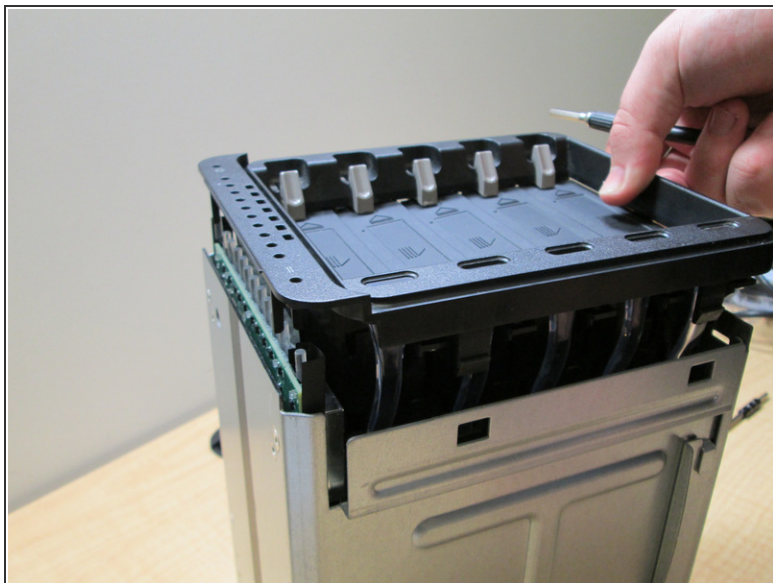

- Push tabs in and carefully pull out the front facer and drive shelves


## Step 6

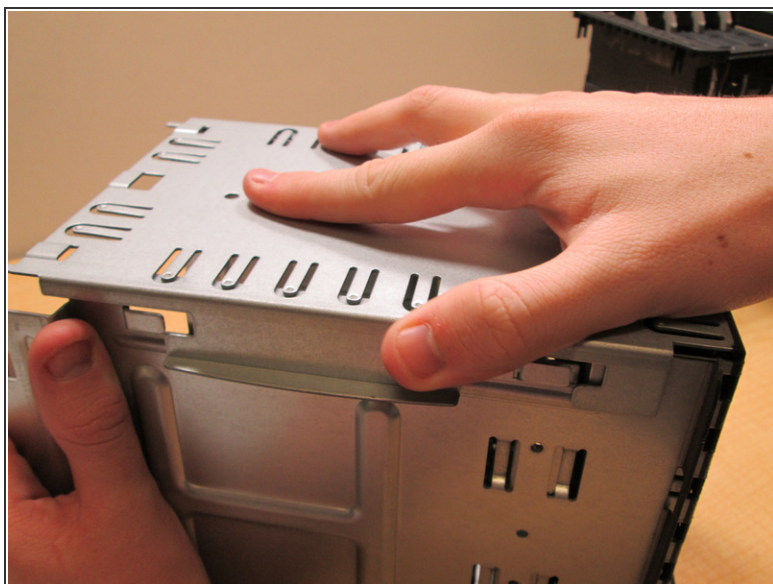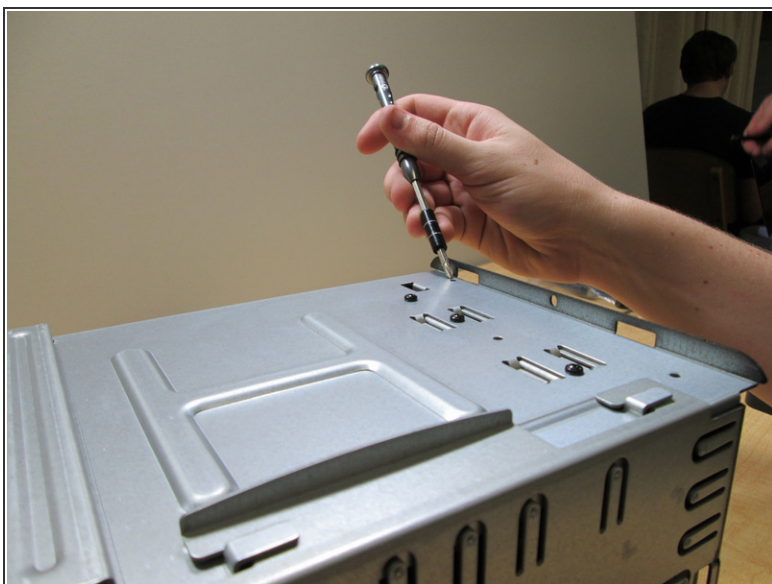

- Unscrew the back face by removing the screw on the back sides, then slide top face apart from the others




## Step 7

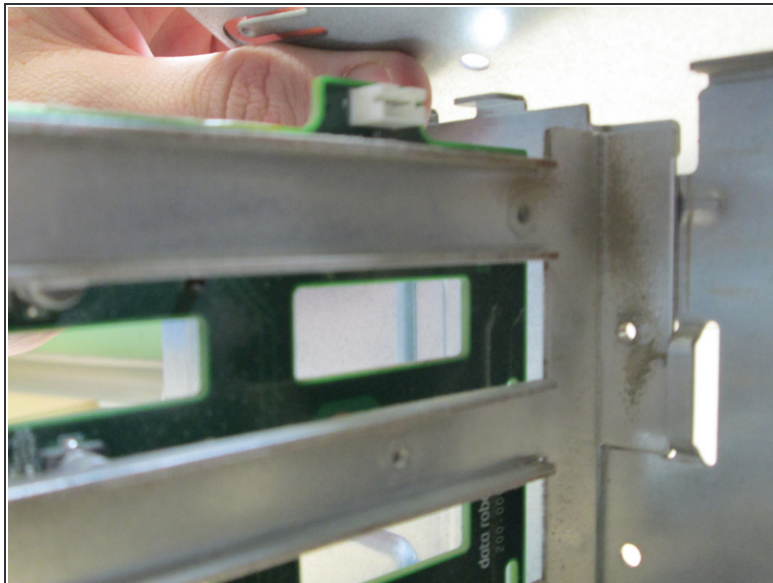



- Carefully unplug the Power Switch and Fan wires.

## Step 8

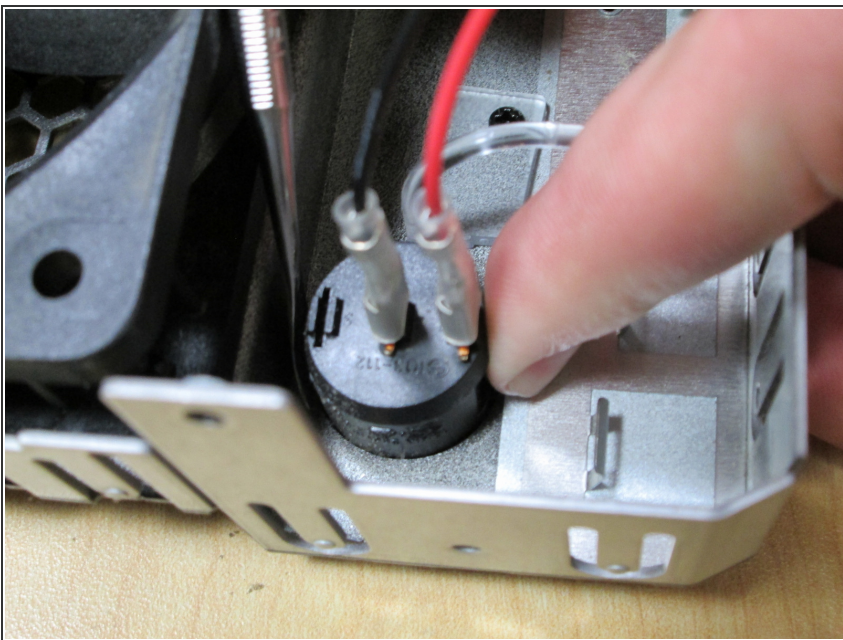

- Press tabs on Power Switch to release the Power Switch and Push out.
- ① A Spudger like object is helpful for pushing in the tabs if the fan is not removed also

## Step 9

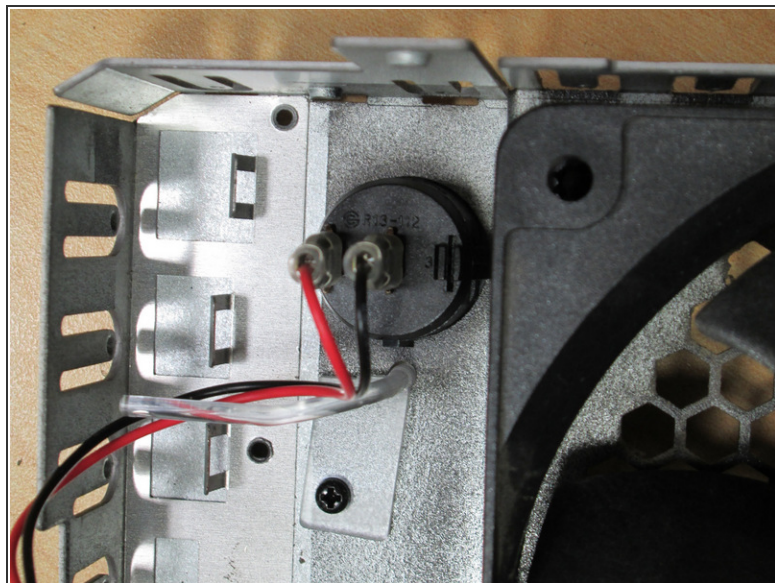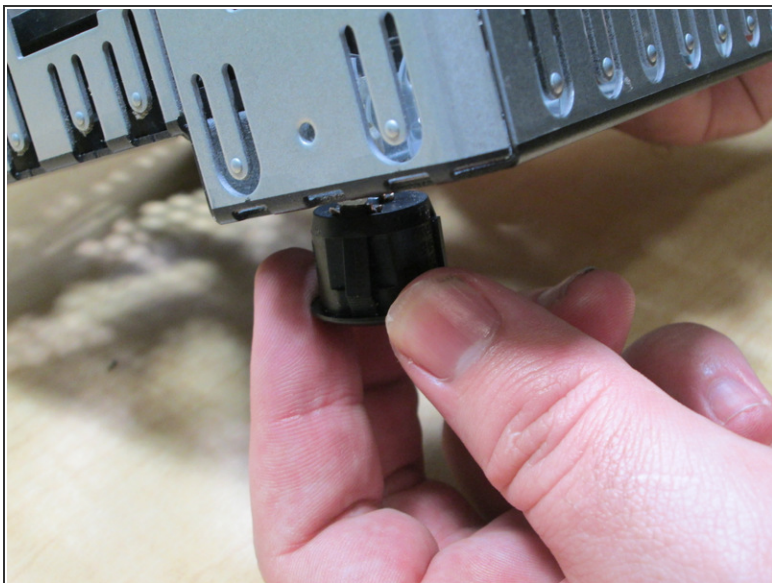

- Finally pull the old switch out and pop the new one in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:16:00 AM.